

Operation Manual


Prisma Mini

Safety Instructions

**When using your Prisma Mini,
the basic precautions should always be followed.
including the following:**

1. Keep away from flammable materials. Heat may transfer to nearby objects, including those not in direct view.
Use the mini heat press only on a flat, stable surface. Always place it on the safety base when not in use.
2. After use, return the device to the safety base and let it cool completely before storage.
3. Do not leave the machine unattended while it is powered on.
4. Unplug the device when not in use, and before cleaning or servicing.
Not intended for use by children.
5. Keep the power cord out of reach to avoid tripping or accidental pulling, especially by children.
6. Only plug into properly grounded outlets. Do not use with extension cords.
7. Do not use in wet or damp conditions. Clean only with a damp cloth when the unit is unplugged and fully cooled.
8. Never leave the appliance connected to power while unattended.
9. This appliance is not suitable for use by individuals (including children) with reduced physical, sensory, or mental capabilities or lack of experience unless under proper supervision.
10. Children must be supervised to ensure they do not play with the appliance.



Specifications

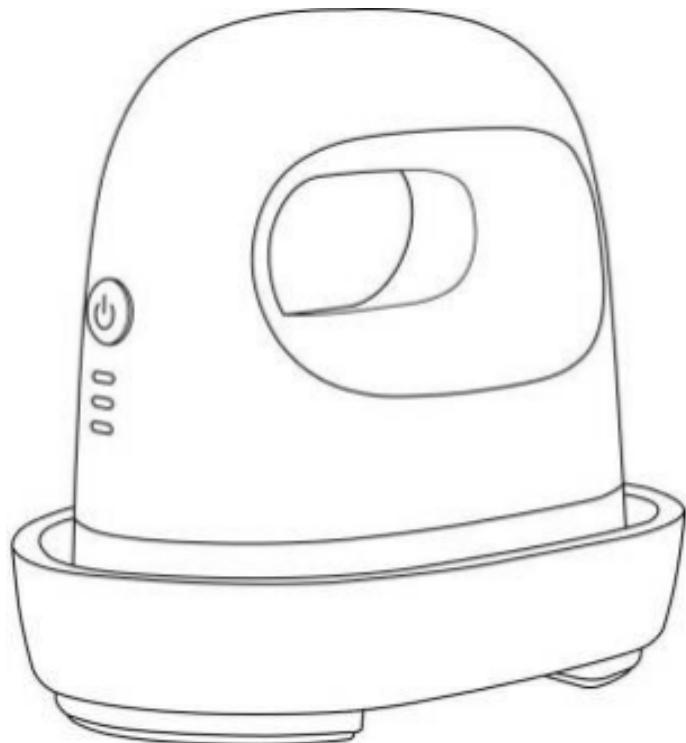

Power	180W/250W
Voltage	110V/220V
Product Weight	1.12 lb / 510 g
Package Weight	1.54 lb / 700 g
Product Size	4.9" x 2.9" x 4.7" (125 x 73 x 119 mm)
Package Size	7.9" x 7.3" x 4.4" (200 x 186 x 113 mm)

Instructions

Press power button for seconds to turn on/off.

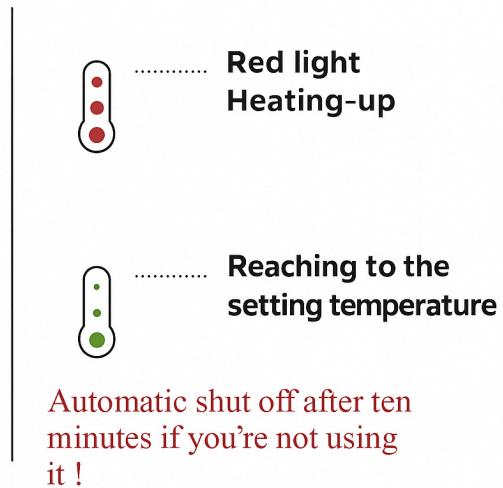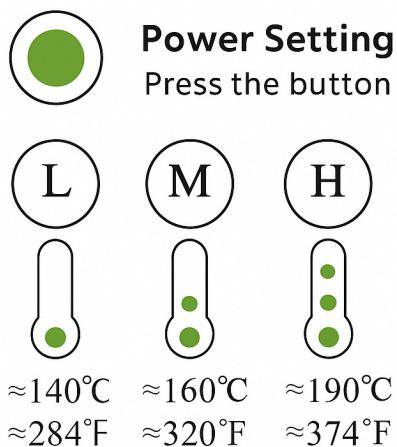

Power On: Press and hold the power button for 3 seconds. The red light indicates heating; the green light means the set temperature is reached.

Set Temperature:

- Press once: 140°C / 284°F
- Press twice: 160°C / 320°F
- Press three times : 190°C / 374°F

Prepare Item: Place the item on the platform. For best results, use a mat underneath to keep it flat.

Transfer Pattern: Position the pattern on the item. Press and hold for about 25 seconds.

Auto Shut-Off: The machine will turn off automatically after 10 minutes of inactivity

Warning

1. Always place the heat press on the safety base when not in use.
2. Keep out of reach of children to prevent accidental contact or burns.
3. Do not immerse the machine in water or any other liquid.
4. If the plug does not match your outlet, replace it with a properly rated plug. Do not use adapters.
5. Do not use the device if it has been dropped or shows visible signs of damage.
6. Never leave the machine unattended while connected to power.
7. Not intended for use by individuals with reduced physical, sensory, or cognitive abilities, or lack of experience, unless supervised by a responsible person.
8. Keep the power cord away from the hot soleplate to avoid melting or fire.
9. Indoor household use only. Do not use the machine outdoors.
10. The soleplate becomes extremely hot—avoid direct contact to prevent burns.
11. **Risk of electric shock:** Do not disassemble or modify the internal components of the machine.